



## GRIP LASER QUICK START GUIDE

Congratulations on your purchase of a Viridian Grip Laser Sight, the most advanced sighting device available. Please take a moment to review this guide prior to operating your Viridian product. The full product manual can be found online at: [ViridianWeaponTech.com/Product-Manuals](http://ViridianWeaponTech.com/Product-Manuals)

### **X DO NOT RETURN THIS PRODUCT TO THE STORE**

If you experience problems with your product or are missing parts, please contact us for assistance. We want to help you!

**Email: [Support@ViridianWeaponTech.com](mailto:Support@ViridianWeaponTech.com)**  
**Toll Free: (800) 990-9390**

### YOUR PACKAGE INCLUDES:

- |   |                         |
|---|-------------------------|
| 1 - Viridian Laser Sight                  | 1 - Warning Label       |
| 1 - 0.035 Allen Wrench for W/E Adjustment | 2 - Mounting Screws     |
| 1 - 2032 Coin Battery                     | 1 - Slotted Screwdriver |



## OPERATING YOUR GRIP LASER

**ON/OFF Activation:** To activate your grip laser, apply pressure to the Activation Pad at the front center of the grip below the trigger guard.

**Mounting: Unload and make weapon safe!** Remove existing grips using enclosed Slotted Screwdriver. Loosen the Battery Release Screw about 2 turns and rotate the securing tab out of the way. Place (1) 2032 battery into grip panel with positive (+) side up, rotate battery securing tab back in place and tighten the Battery Release Screw securely. Locate both grips on the pistol and firmly squeeze into place. Insert and tighten the grip screws firmly with Slotted Screwdriver, but not over tightened (about 0.5-1ft-lb).

## WARNINGS

### LASER LIGHT - AVOID DIRECT EYE EXPOSURE

#### CLASS 3R LASER

**CAUTION!** Direct eye exposure to lasers can cause temporary or permanent eye damage.

**DO NOT** stare into the laser beam.

**DO NOT** look into the laser beam through binoculars or telescopes.

**DO NOT** point the beam at mirror-like surfaces.

**DO NOT** shine the laser beam into or near anyone's eyes.

**DO NOT** point the laser at any person, animal, or moving vehicle, including aircraft.

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.

This product is compliant to: EN/IEC 60825-1 2014(EU)/60825-1 2007(USA)

**BEFORE HANDLING ANY FIREARM YOU MUST READ AND UNDERSTAND THE ENTIRE CONTENTS OF YOUR FIREARM MANUAL & VIRIDIAN OPERATORS MANUAL, ESPECIALLY THE SAFETY PRECAUTIONS & PROCEDURES FOR SAFE FIREARMS HANDLING.**

## WARNING LABEL & PLACEMENT

RED



### IMPORTANT:

Laser warning label supplied for installation on the firearm.

LASER APERTURE



## HOW TO ZERO YOUR VIRIDIAN® LASER - QUICK FORM

See [ViridianWeaponTech.com](http://ViridianWeaponTech.com) for more detailed instructions and videos

1. Unload and make weapon safe.
2. Align Viridian laser to the iron sights of your firearm at the distance that you want to be your zero; between 21 feet and 25 yards is suggested.
3. Load and fire a shot group at target using the laser to aim.
4. Unload and make weapon safe.
5. Adjust windage and elevation so that the center point of laser coincides with groupings. To do this, adjust the laser toward the grouping center using the chart below.
6. Repeat steps 3 through 5 in order to get alignment.

**Up/Down Adjustments:** Clockwise moves laser down. Counterclockwise moves laser up.

**Left/Right Adjustments:** Clockwise moves laser right. Counterclockwise moves laser left.

See complete, detailed product warnings & operating instructions in full product manual, available at [ViridianWeaponTech.com/Product-Manuals](http://ViridianWeaponTech.com/Product-Manuals)

730-0130